alcatel

PLUS

10” Windows

2-IN-1 Convertible Tablet

QUICK START GUIDE

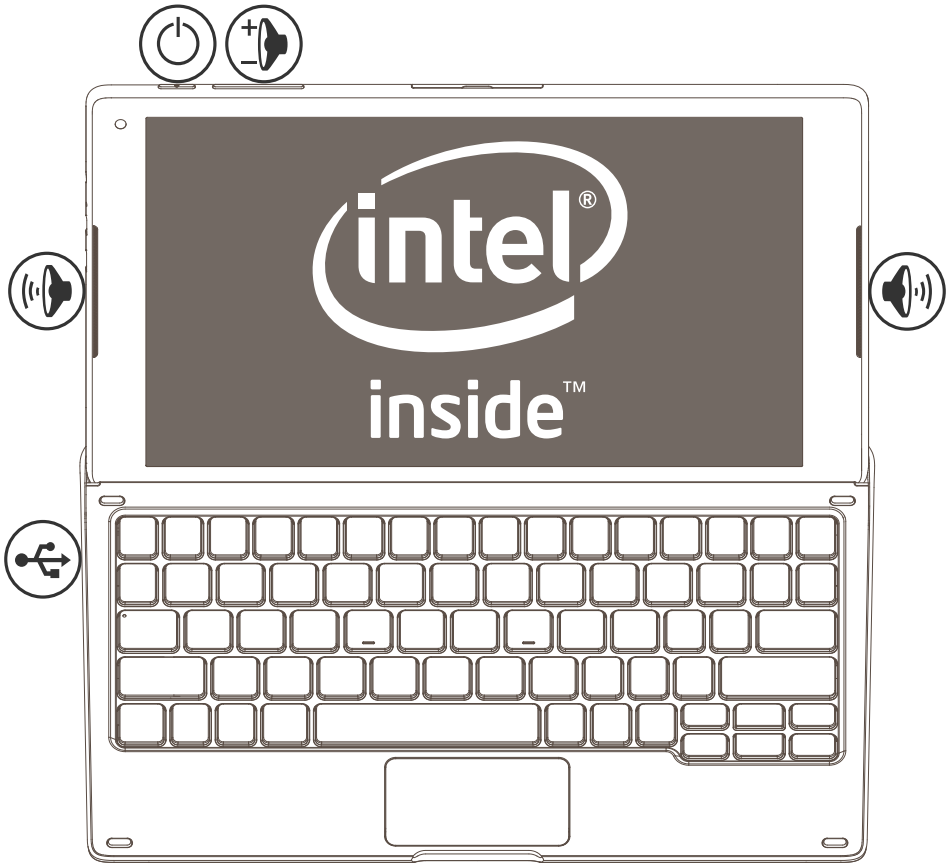

8085

CJB1FH001AAA

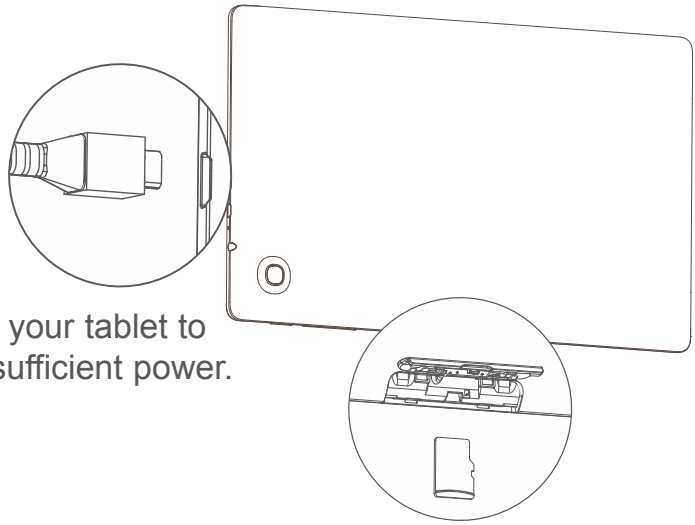

1 Charge your tablet to obtain sufficient power.

2 Insert the SD card and close the cover.

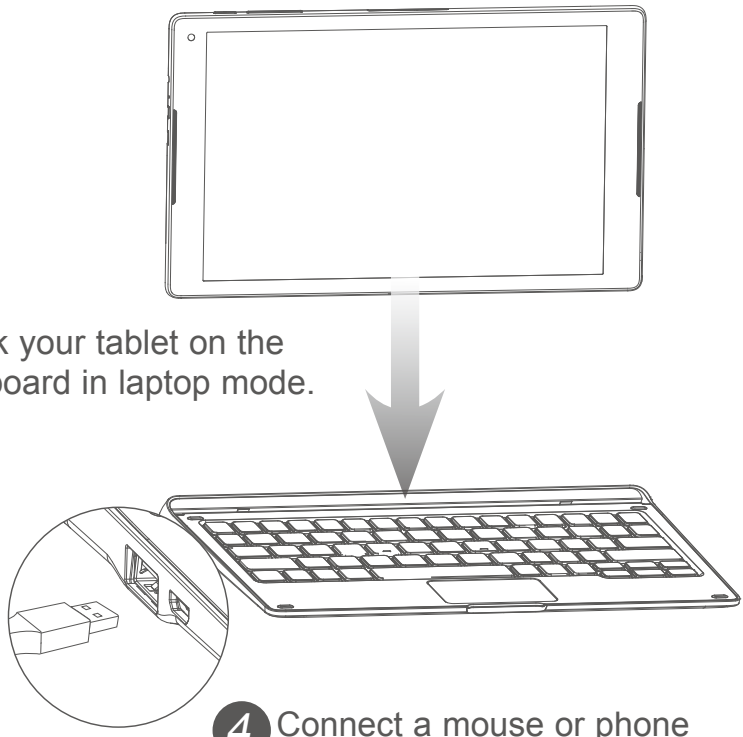

3 Dock your tablet on the keyboard in laptop mode.

4 Connect a mouse or phone to your tablet through the USB port.

User Manual and FAQ are available online
www.alcatel-mobile.com

SAVE PAPER SAVE TREES

PLEASE CONSIDER THE ENVIRONMENT BEFORE PRINTING

Start menu

Touch the key to switch to the Start menu.

- Move all of the apps you use most frequently to your Start menu for quick access. You can rearrange, resize, add, and remove the tiles whenever you want.
- By touching at the upper left of the Start menu, you will find quick links to File Explorer, Settings, Power (shut down, sleep, and restart), and All apps.
- Frequently used apps appear at the upper left.
- Your name and profile picture appear at the top of the left side. Select them to change your account settings, lock the screen, or sign out.

Touch a tile to open an application.

Touch to go back to the desktop.

Taskbar
- Status/Notification indicators
- Touch an icon to view more.

2 Action center

Swipe in from the right edge of the screen or touch in the taskbar to open the Action center.

Here you can access common settings like Wi-Fi connections or screen brightness. When there are notifications, they appear at the top of the Action center.

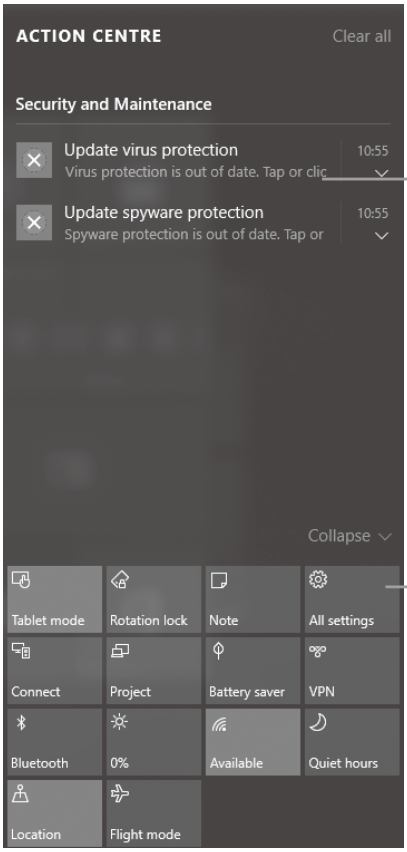

Notifications appear here.

Touch to make the common settings area smaller.

2.1 Search

Go to and select Cortana or touch in the taskbar. Then enter your question in the search box.

3 Task view

Swipe in from the left edge of the screen or touch on the taskbar to see all your open apps. Select an app to focus on or close an app by touching the "X" in the upper-right corner of the app.

Touch to view the details of a running task.

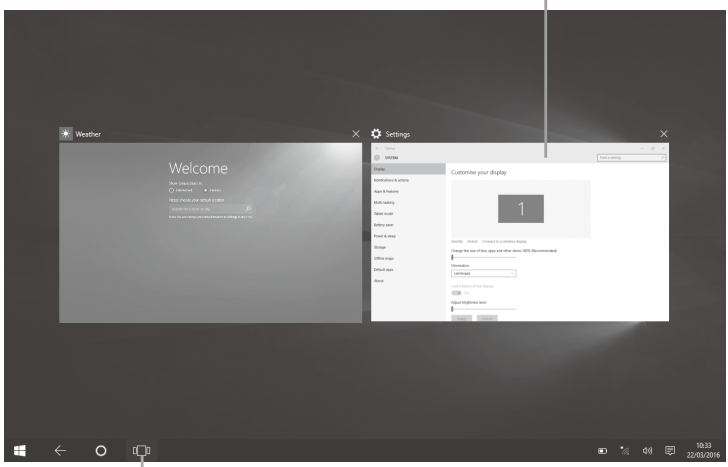

Touch to enter or exit the task view mode.

4 Settings

Select **> Settings** in the Start menu or **> All settings** in the taskbar to access all your settings.

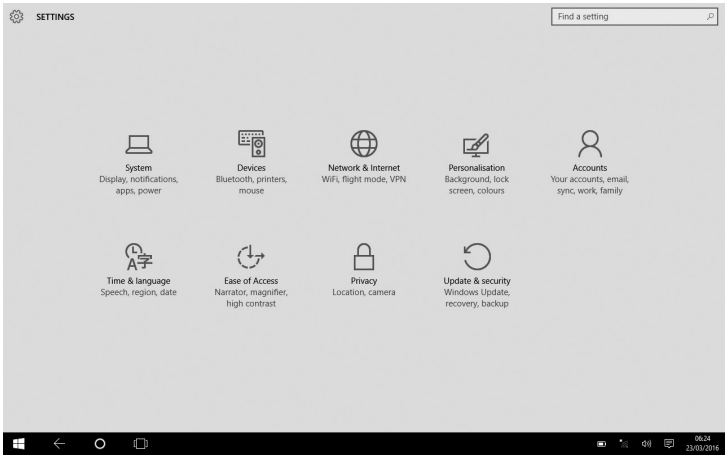

5 Mode switchover

Once your tablet has started, you can choose your preferred viewing mode.

When you separate your tablet from the keyboard, it supports switchover between the landscape and portrait modes.

When you dock your tablet on the keyboard, it switches to the laptop mode.

Landscape mode

Portrait mode

Laptop mode

6 Work with the keyboard

The keyboard enables your tablet to work as a laptop by providing physical keys, a gesture-enabled touchpad, and the option to connect a mouse, a smartphone, another tablet, etc.

6.1 Fold your tablet

When you fold your tablet with the keyboard, it becomes more portable, occupies less space, and goes to sleep to extend the battery life.

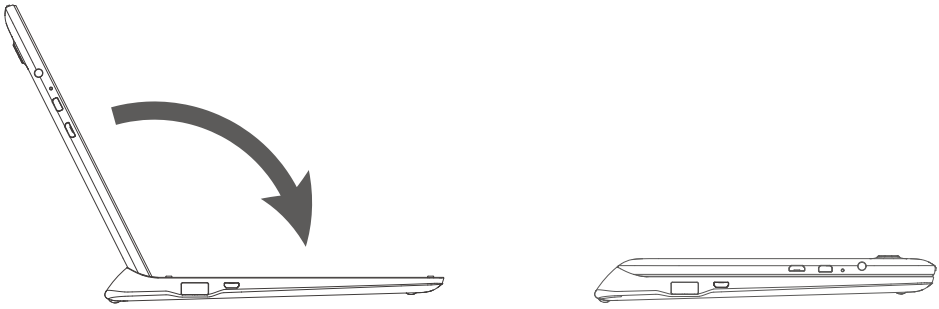

6.2 Touchpad gestures

The keyboard touchpad supports eight gestures to make operations much easier.

One finger

Double touch to start an app. This equals the effect of left-clicking using a mouse.

Double touch and slide to move an icon across the screen.

Two fingers

Touch to show the attributes of an object. This equals the effect of right-clicking using a mouse.

Touch and slide up and down for scrolling up and down.

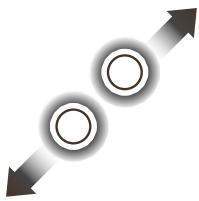

Draw two fingers apart or together to scale an element on the screen.

Three fingers

Touch to start the Cortana search assistant.

Touch and slide left or right to switch between tasks.

Four fingers

Touch to show the Action center.